

## Installation instruction single flow screws:

This pressure relief vent is designed as a dual flow pressure relief vent, which can be adjusted to a single flow pressure relief vent. To do this, 4 screws must be inserted per louvre to ensure the flow to one direction is allowed, and the flow to the other direction is blocked.

The below shows the number of screws per model of PRV:

Model	Number of screws per louvre	Total number of screws
150	4	4
300	4	8
450	4	12
600	4	16
750	4	20
1050	4	28

Insert the screws as per the below image: 2 screws on both the left and right side of the louvre (a total of 4 screws per louvre), at the pre-drilled holes.

