

 
QuickGuide

Using a router for GaugeRemote or Virtual Gauge

To increase wireless connection range or to run multiple DM32 on one PC...

Step 1. "Join" the WiFi network of a router or hotspot (advanced users)

a Tap [Settings] on DM32

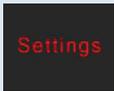

b Tap [Next]



c Tap [Network]



d Tap [Status], until "WiFi Join" appears



e Tap



f Tap [Network name]




g Enter network name



Step 2A. WiFi without password

- h** Tap [Secure Network], until [No] appears

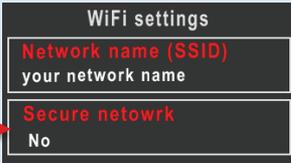

- i** Tap  and wait for WiFi icon to appear



Step 2B. WiFi with password

- h** Open Configurator Software on computer



- i** Connect DM32 with USB cable.




- j** Wait for gauge to appear in the Configurator.




- k** Select the Status **WiFi Join**




- l** Select the IP Mode **DHCP**

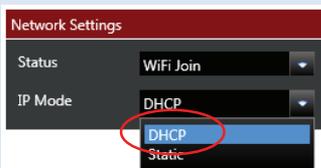


- m** Enter **Network name (SSID)** and enable "Secure Network"

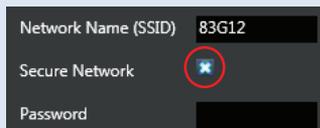


n Enter network Password

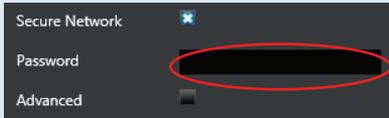 

o Click **Save to gauge** to save network and its password to DM32

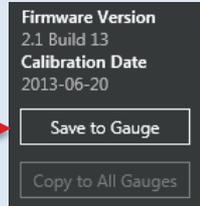

p A window appears, confirming the gauge update

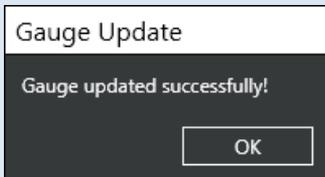


Step 3. Continue

Connect your smart device to the same router/hotspot and carry on to step 4. of the **DM32 WiFi GaugeRemote** QuickGuide on page 2

Or

Connect your PC to the same router/hotspot and carry on to step 4. of the **DM32 Virtual Gauge** QuickGuide on page 6.

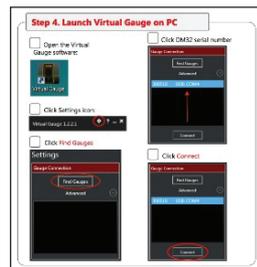



www.retrotec.com

Support: (888)330-1345

International: (604)732-0142

Made in Everson, WA, USA