
## 3-Fan Quick Guide Set-up for MultiFanTestic retroited



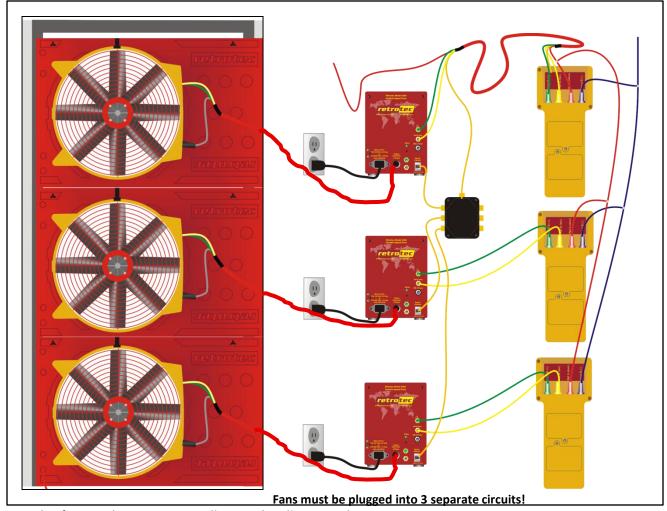

Set up the fans and gauges according to the diagram above:

- 1. Set up fans in the doorway
- 2. Connect each variable speed drive to a fan using the umbilical cord from the drive
- 3. Connect one end of each umbilical cord (yellow and green tubes, Ethernet cable) to each variable speed drive
  - a. Connect the other end of the umbilical cord tubing to each DM-2 gauge (do not connect Ethernet cables to gauges)
- 4. Connect each umbilical cord Ethernet cable to the fan splitter (or use extra cables outside of the umbilical cord between variable speed drive and splitter (as seen above))
  - a. T-connect the red tubing from each of the gauges together
  - b. T-connect the blue tubing from each of the gauges together
  - c. Pass the red tube through the port in the panel and toss away from
- 5. Connect each DM-2 gauge to the computer via USB cable
- 6. Start MultiFanTestic (make sure the DM-2 driver has been installed before beginning test)
  - a. Click [Find Gauges]: each of the 3 gauges should appear with serial numbers; note the serial number of the "#1 Fan" gauge (this is the primary gauge)
  - b. Connect the primary gauge to the fan splitter via Ethernet cable
  - c. Click [Start Auto-Test] to begin an automatic test run

QG330 rev-2010-07-14